



**AnyDATA**  
*AnyTime AnyPlace Any Wireless  
Data Solutions*

# *EMIV-DUAL User Manual Application Information*

*01-EMIVDUAL-1\_X1  
June 29, 2004*

**AnyDATA.NET Inc.**  
**Hanvit Bank B/D 6F**  
**Byulyang-dong Kwachon**  
**KOREA**

Tel) 82-2-504-3360

Fax) 82-2-504-3362

**AnyDATA.NET Inc.**  
Hanvit Bank B/D 6F  
Byulyang-dong Kwachon  
KOREA

Copyright © 2001 **AnyDATA.NET Inc.**  
All rights reserved. Printed in the Republic Of KOREA.

All data and information contained in or disclosed by this document are confidential and proprietary information of **AnyDATA.NET Inc.**, and all rights therein are expressly reserved. By accepting this material, the recipient agrees that this material and the information contained therein are held in confidence and in trust and will not be used, copied, reproduced in whole or in part, nor its contents revealed in any manner to others without the express written permission of **AnyDATA.NET Inc.**

**AnyDATA.NET** Proprietary: Restricted Distribution. This document contains critical information about **AnyDATA.NET** products and may not be distributed to anyone without permission of **AnyDATA.NET** Inc. All data and information contained in this document are proprietary and confidential information of **AnyDATA.NET** Inc. No part of this document may be reproduced, in any form or any means without written permission of **AnyDATA.NET** Inc.

Although the information in this document has been carefully reviewed and its believed to be reliable. **AnyDATA.NET** Inc. does not assume any liability arising out of the application or use of any product described herein, Neither does it convey any license under its patent rights nor rights of others.

**Send Technical Questions to :**  
**[johnkim@anydata.net](mailto:johnkim@anydata.net)**

EMIV-DUAL Reference Manual Application Information  
01-EMIVDUAL-1\_X1  
June 29, 2004

**Restricted Distribution**  
**DO NOT COPY**

## **Introduction**

The EMIV-DUAL is designed for the test and simulation of the CDMA wireless data communications. User can connect the EMIV-DUAL to your PC or Notebook and easily test the wireless communications. User can use this to develop your applications software even before user's own hardware is ready.

It also can be used as a debugging during user's hardware test.

## **Disclaimer and Limitation of Liability**

AnyDATA.NET Inc. assumes no responsibility for any damage or loss resulting from the misuse of its products. AnyDATA.NET Inc. assumes no responsibility for any loss or claims by third parties, which may arise through the use of its products.

AnyDATA.NET Inc. assumes no responsibility for any damage or loss caused by the deletion or loss of data as a result of malfunctions or repairs.

The information disclosed herein is the exclusive property of AnyDATA.NET Inc. and no part of this publication may be reproduced or transmitted in any form or by any means including electronic storage, reproduction, execution or transmission without the prior written consent of AnyDATA.NET Inc. The information contained in this document is subject to change without notice.

Reproduction, adaptation or translation of this document is prohibited without prior written permission of AnyDATA.NET Inc.

**FCC RF Exposure Information**

**Warning!** Read this information before using this device.



In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this device complies with the FCC guidelines and these international standards.

**CAUTION**

- **Operating Requirements**

- ▶ The user can not make any changes or modifications not expressly approved by the party responsible for compliance, otherwise it could void the user's authority to operate the equipment.
- ▶ To satisfy FCC RF exposure compliance requirements for a mobile transmitting device, **this device and its antenna should generally maintain a separation distance of 20cm or more from a person's body.**
- ▶ **Antenna Gain must not exceed 1dBi**

**Special accessories**

In order to ensure this device in compliance with FCC regulation, the special accessories are provided with this device and must be used with the device only. The user is not allowed to use any other accessories than the special accessories given with this device

*Restricted Distribution  
DO NOT COPY*

## **Contents**

---

- 1 Introduction**
  - 1.1 Purpose**
  - 1.2 Organization**
  - 1.3 Revision History**
  
- 2 Overview**
  - 2.1 Application Description**
  - 2.2 Technical Specifications**
    - 2.2.1 General Specification**
    - 2.2.2 Receive Specification**
    - 2.2.3 Transmit Specification**
    - 2.2.4 gpsOne Receiver Specification**
    - 2.2.5 Standards**
  - 2.3 Interface Diagram**
  - 2.4 EMIV-DUAL General Features**
  - 2.5 Internal Modem Features**
  
- 3 PIN Description**
  - 3.1 8-Pin Connector (RS232 Standard)**
  - 3.2 3-Pin Connector (Debugging)**
  - 3.3 DC Power Connector**

**Restricted Distribution**  
**DO NOT COPY**

## **4 Interface Descriptions**

### **4.1 Overview**

### **4.2 RS232 Interface (Standard)**

## **5 Electrical Specifications**

### **5.1 Absolute Maximum Ratings**

### **5.2 Recommended Operating Conditions**

### **5.3 Power Consumption**

### **5.4 Serial Interface Electrical Specifications**

## **6 Mechanical Dimension**

### **6.1 EMIV-DUAL Outline**

## **7 FCC Notice**

## **8 Installation Example**

## 1. Introduction

### 1.1 Purpose

This Manual provides hardware interface and programming information for EMIV-DUAL CDMA Wireless Data Modem.

### 1.2 Organization

The interface and operation section is organized into the following subsections:

- Section 2 – Introduces users to the EMIV-DUAL CDMA Wireless Data Modem basic features and general specifications.
- Section 3 – Contains EMIV-DUAL Pin description - DC12V Input Port, 8pin Serial Port and Debugging Port.
- Section 4 – Describes the UART Interface.
- Section 5 – Specifies the recommended operating conditions, DC voltage characteristics, I/O timing, and power estimations for the modem.
- Section 6 – Provides package dimensions and outlook features for the modem.
- Section 7 – Describes the FCC Notice.

### 1.3 Revision History

The revision history for this document is shown in Table 1-1.

**Table 1-1 Revision History**

Version	Date	Description
X1	June 2004	Initial Release

*Restricted Distribution  
DO NOT COPY*

*Restricted Distribution  
DO NOT COPY*

## 2. Overview

---

### 2.1 Application Descriptions

The CDMA Wireless Data Modem is a complex consumer communications instrument that relies heavily on both digital signal and embedded processor technologies. The Wireless Data Modem manufactured by AnyDATA.NET supports Code-Division-Multiple-Access (CDMA). This operates in 800MHz CDMA and 1900MHz PCS spectrum.

In a continuing effort to simplify the design and to reduce the production cost of the Wireless Data Modem, AnyDATA.NET has successfully developed the EMIV-DUAL. The EMIV-DUAL is AnyDATA.NET's latest compact Wireless Data Modem operating in 800MHz CDMA and 1900MHz PCS spectrum, also contains complete digital modulation and demodulation system for CDMA standards as specified in IS-95 A/B and IS-2000.

The subsystem within the EMIV-DUAL includes a CDMA processor (MSM6050), an integrated CODEC with an ear piece and microphone amplifiers, and an RS-232 serial interface supporting forward link data communications of a rate of 153kbps.

The EMIV-DUAL provides external interface. External interface includes the standard RS-232, Digital Audio, External reset control, parallel LCD Display, Keypad, Ringer extension ports and R-UIM for China market.

The EMIII-DUAL has the capability to power down unused circuits in order to dynamically minimize power consumption.

*Restricted Distribution  
DO NOT COPY*



## 2.2 Technical Specifications

### 2.2.1 General Specifications

PARAMETERS	DESCRIPTIONS
External Access	Code-Division-Multiple-Access (CDMA)
CDMA Protocol	IS-95 A/B, IS-126, IS-637A, IS-707A, IS-2000
Data Rate	153.6Kbps
Transmit/Receive Frequency Interval	45MHz for Cellular and 80MHz for PCS
Band Width	1.23MHz
Operating Voltage	DC 7V ~ 16V
Current Consumption	Sleep mode : 30mA, Idle mode (70mA) , Traffic mode : 350mA (Max) at 12V
Operating Temperature	-30℃ ~ +60℃
Frequency Stability	±300Hz for 800MHz CDMA and ±150Hz for 1900MHz CDMA
Antenna	Magnet mount helical antenna, 50ohm, 1dBi Gain for 800MHz and 1900MHz, -4dBi for 1575MHz
Size	60 X 112 X 29mm
Weight	About 110g
External Interface	RS-232, Analog audio, Power, Antenna, Debug port

*Restricted Distribution*  
*DO NOT COPY*

**2.2.2 Receive Specifications**

PARAMETERS	DESCRIPTIONS
Frequency Range	869.04 ~ 893.97 MHz for 800MHz CDMA and 1931.25 ~ 1988.75MHz for 1900MHz CDMA
Sensitivity	Below -104dBm
Interference Rejection	Single tone (-30dBm @900KHz): Below -101dBm for 800MHz Single tone (-30dBm @1250KHz): Below -101dBm for 1900MHz
Spurious Wave Suppression	Below -80dBc
Input Dynamic Range	-25dBm ~ -104dBm

**2.2.3 Transmit Specifications**

PARAMETERS	DESCRIPTIONS
Frequency Range	824.04 ~ 848.97 MHz for 800MHz CDMA and 1851.25 ~ 1908.75MHz for 1900MHz CDMA
Nominal Max. Power	0.32 W (24.7dBm)
Peak Power in Operation Mode	0.35W (25.5dBm)
Minimum Controlled Output Power	Below -50dBm
Max Power Spurious	900KHz: Below -42dBc/30KHz 1.98MHz: Below -54dBc/30KHz 1250KHz : Below -42dBc/30KHz 1.98MHz: Below -50dBc/30KHz

**2.2.4 gpsOne Receiver Specifications**

Parameters	Descriptions
Frequency Range	L1, 1575.42MHz
C/A Code	1.023MHz Chip Rate
Receiver Sensitivity	-152dBm

### 2.2.5 Standards

IS-95A/B/C : Protocol Between MS & BTS  
IS-96A : Voice Signal Coding  
IS-98A : Base MS Function  
IS-126 : Voice Loop-Back  
IS-637 : Short Message Service  
IS-707 : Data Service  
Built-in TCP/IP : AnyDATA proprietary software  
IS-657 : packet data

**Restricted Distribution**  
**DO NOT COPY**

## 2.3 Interface Diagram

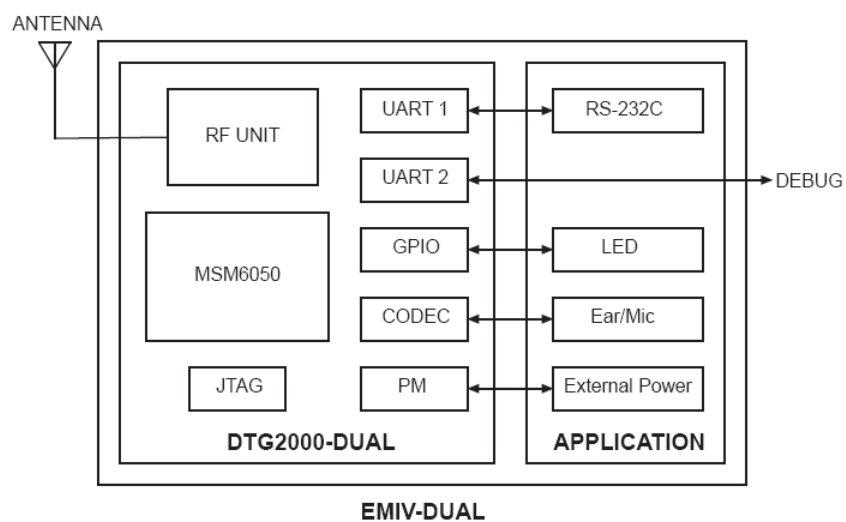


Figure 2-1 Interface Block Diagram


*Restricted Distribution*  
**DO NOT COPY**

## 2.4 EMIV-DUAL General Features



### Figure 2-2 EMIV-DUAL General Features

## 2.5 Internal Modem Features

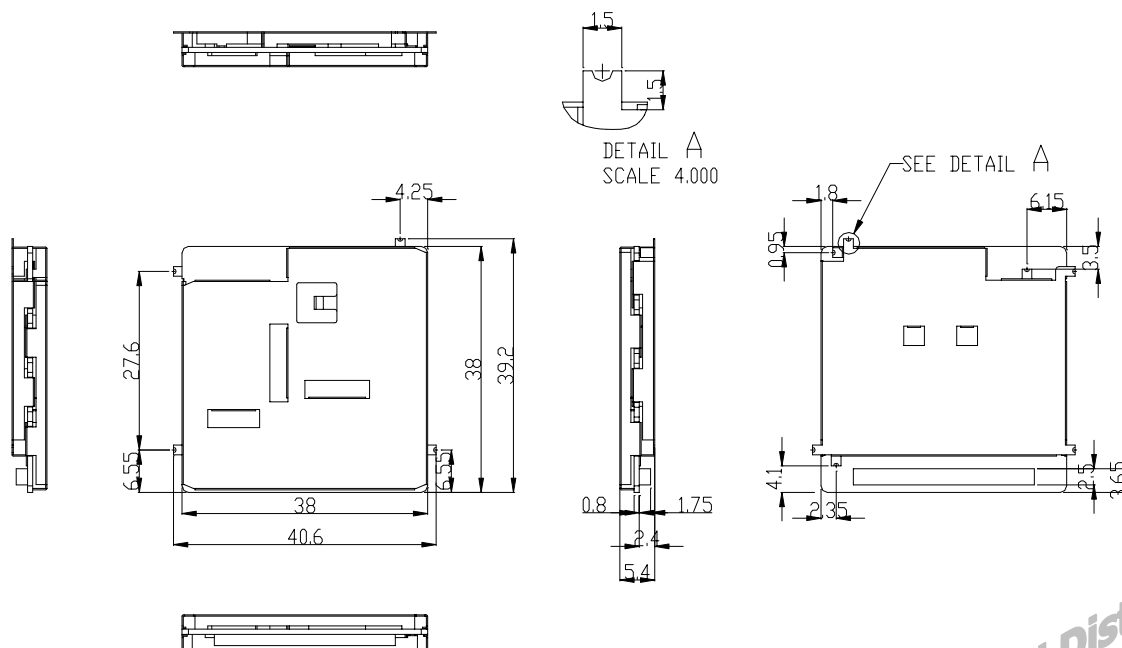

### Figure 2-3 Internal Modem General Features (DTG2000-D5AL)

000-051AL)

### 3. PIN Description

#### 3.1 8-Pin Male Modular Jacks (RS232 Standard)

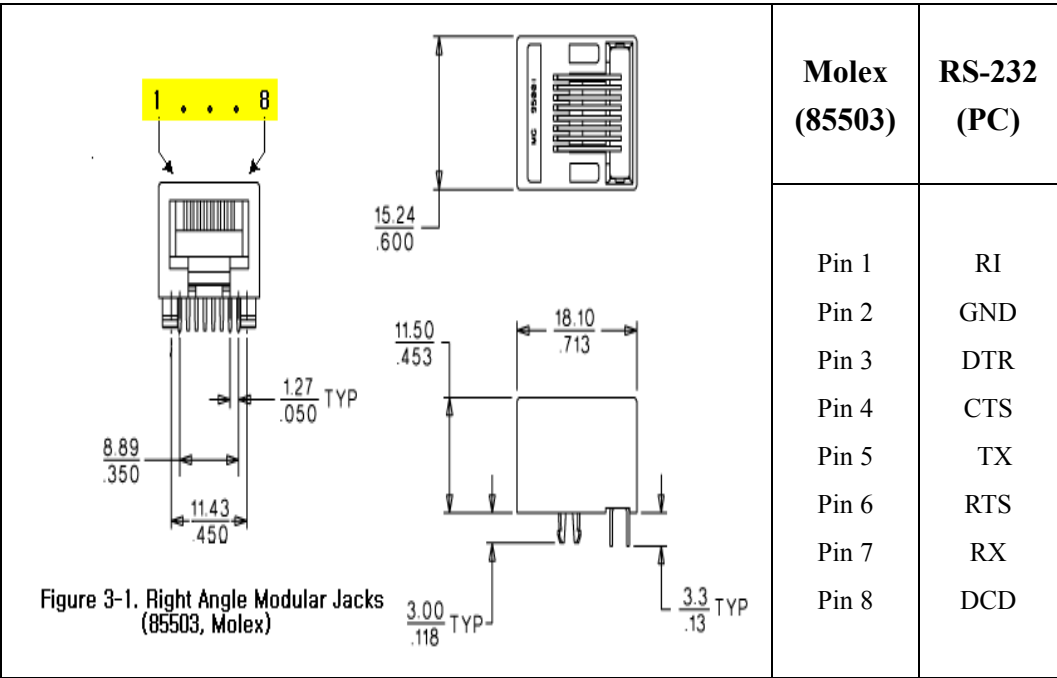


Figure 3-1 Right Angle Modular Jacks Pin Description (85503,Molex 8P)

#### 3.2 3-Pin Connector (Debugging)

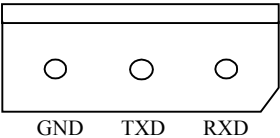


Figure 3-2 Debugging Connector (5268,Molex 3P)

#### 3.3 DC Power Connector

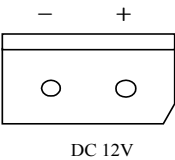


Figure 3-3 DC 12V Power Connector (5268, Molex 2P)

Restricted Distribution  
DO NOT COPY

## 4. Interface Descriptions

### 4.1 Overview

This chapter covers information required to design the EMIV-DUAL into a subscriber unit application. In addition, the internal signals that are necessary for complete understanding of the UART interfaces are described below.

### 4.2 RS232 Interface (Standard)

The Universal Asynchronous Receiver Transmitter (UART) communicates with serial data that conforms the RS-232 Interface protocol. The modem provides 5.0V CMOS level.

All the control signals of the RS-232 signals are active low, but data signals of RXD, and TXD Are active high. The UART has a 64byte transmit (TX) FIFO and a 64byte receive (RX) FIFO. The UART Features hardware handshaking, programmable data sizes, programmable stop bits, and odd, even, no parity. The UART operates at a 115.2kbps maximum bit rate.

NAME	DESCRIPTION	CHARACTERISTIC
DP_DCD/	Data Carrier Detect	Network connected from the modem
DP_RI/	Ring Indicator	Output to host indicating coming call
DP_RTS/	Request to Send	Ready for receive from host
DP_TXD	Transmit Data	Output data from the modem
DP_DTR/	Data Terminal Ready	Host ready signal
DP_RXD	Receive Data	Input data to the modem
DP_CTS/	Clear to Send	Modem output signal
GND	Signal Ground	Signal ground

Figure 4-1 UART Interface Pinouts

*Restricted Distribution  
DO NOT COPY*

## 5. Electrical Specifications

### 5.1 Absolute Maximum Ratings

Operating the modem under conditions that exceed those listed in the Absolute Maximum. The Ratings table may result in damage to the modem.

Absolute Maximum Ratings may be considered as limiting values, and are considered individually. While all other parameters are within their specified operating ranges, the functional operation of the modem under any of the conditions in the Absolute Maximum Ratings table is not implied.

**Table 5-1 Absolute Maximum Ratings**

PARAMETER	MIN	MAX	UNITS
Storage Temperature	-40	+80	°C
Voltage On Any Input	-	+20	V
Voltage On Any Output		+10	V
Supply Voltage	-	+20	V
Initializing Current	100		mA
Drop	No damages after 60-Inch drop over concrete floor		

### 5.2 Recommended Operating Conditions

PARAMETER	MIN	MAX	UNITS
Supply Voltage	+7	+16	V
Operating Temperature	-30	+60	°C
Operating Humidity	95%(50°C) Relative Humidity		

### 5.3 Power Consumption

Conversation	STANDBY	
	Idle	Sleep
350mA (MAX)	70mA	30mA

### 5.4 Serial Interface Electrical Specifications


PARAMETER	MIN	MAX	UNITS
Input High Voltage	+2	+15	V
Input Low Voltage	-15	-2	V
Output High Voltage	+5	+7	V
Output Low Voltage	-7	-5	V

*Restricted Distribution  
DO NOT COPY*



## 6. Mechanical Dimensions

### 6.1 EMIV-DUAL Outline

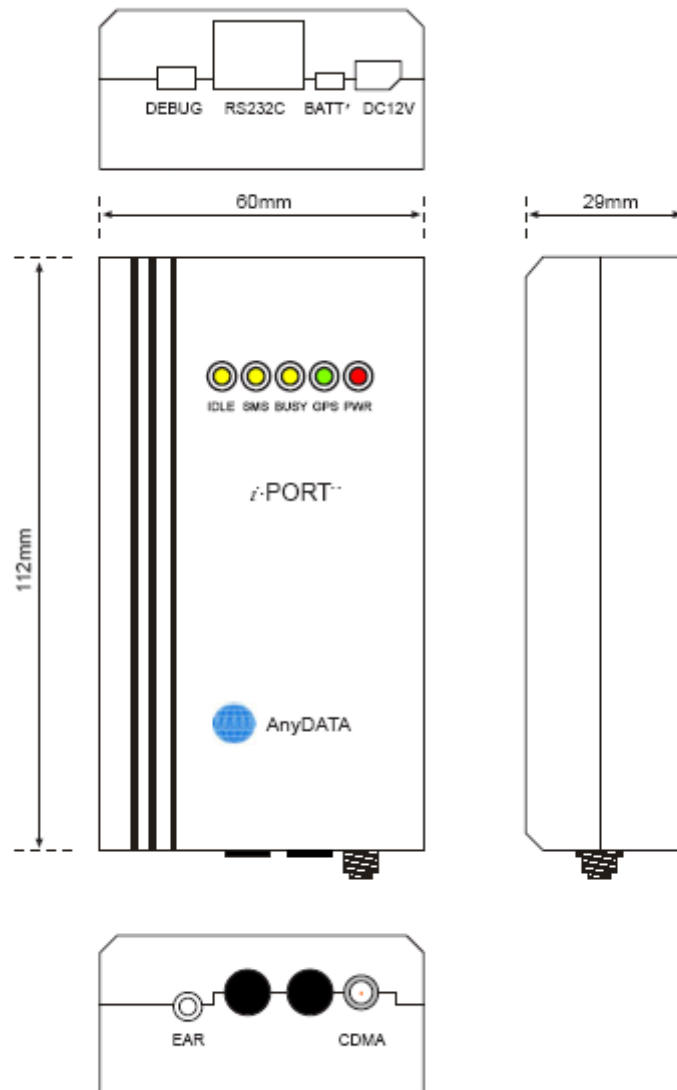

## 7. FCC Notice

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15, Part22 and Part24 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*Restricted Distribution  
DO NOT COPY*

*Restricted Distribution  
DO NOT COPY*

## 8. Installation Example

